

Universal A/C Remote User Guide **UAR-409**

Product Description

Dear User: Thank you for selecting the CETO Universal Remote. The UAR-409 is a versatile remote control featuring 4.000 codes suitable for both domestic and international devices, including new and old models, fixed-frequency and inverter systems. It is compatible with 98% of air conditioners worldwide. The remote offers timer on/off functionality and digital key input. With our patented digital key input system (Patent No.: ZL200810023186.7), you can complete the setup process in just a few seconds, making it the ideal choice for updating or replacing your original remote. Please take the time to thoroughly read the instructions before setting up your remote to ensure ease of use

Preparation

To begin using the remote control, first set it up by following these steps: Open the battery cover and insert two AAA (VM-4, R03) batteries, ensuring that they are aligned according to the polarity markings indicated within the battery compartment.

Patent coding set up

1.Find the required codes in the code table. Each brand has multiple code groups. Try the first code, and if it doesn't work, proceed to the next until your device operates. For example, with AUCMA, start with 0288, then try 0289 if needed, and continue.

2.Press and hold the SEL button for 1 second, then release. The LCD code will blink once. Enter La tess and hold the OLE bit ton 1 second, then retering each digit, the remaining digits will blink. Once all 4 digits are entered, the code stops blinking, and the remote control is configured. The numeric buttons will return to their original function, and you can now operate your air

3.Once your air conditioner is on, test the other functions. If they don't work, try the next code group until all functions operate correctly. The remote control has 4,000 codes, so it won't work for codes greater than 4,000.

Auto-search by one key

If you're unsure of your air conditioner's brand or it's not listed in the code table, follow these ps to search for the correct code:

steps to search for the correct code: 1.Aim the remote control at your air conditioner and press the "SEL" button for 5 seconds, then release. The remote will enter auto-search mode, continuously sending signals while the code blinks and increases. When the air conditioner receives a signal and emits a buzzer, press any key to confirm.

2. Once your air conditioner is on, test the other functions. If they don't work, repeat the previous steps until you find a code that allows you to operate your device fully.

Clock set up

- Press the "CLOCK" button, clock signal is blinking.
 Press the "TIME+" "TIME-" of the time button, setting to the current time.
 Press the "CLOCK" button again, stop blinking, the time setting is complete.(If you did not press the "clock" button, it can be setting automatically after 5 seconds)

TIMER ON

- You can set timer on only turning off your air conditioner
- 1. Press the "ON" button, the LCD displays the clock signal "" and time blinking. 2. Press "TIME + " "TIME-" button, adjust the time when you want to make the air conditioner turn
- on automatically.
- 3. Time blinking and it will stop after 5 seconds. The LCD displays current "MO" time and clock signal. Now setting is complete.

TIMER OFF

- You can set timer on, only after turning on your air conditioner.
- 1. Press the "OFF" button, the LCD displays the clock signal "@FO" and time blinking.
- 2. Press the "TIME+" or "TIME-" button; adjust the time when you want to make the air conditioner
- turn off automatically. 3. Time blinking, and it will stop after 5 seconds. The LCD displays current time "ITO" and clock signal. Now setting is complete.

Note

- 1. If you press TIMER ON/OFF twice continuously, timer is deleted.
- 2. After timer setting is finished, you should make the remote control's emit directs to your air
- conditioner's receiving location in available distance. If not, the settings deleted. 3. If you want to see the timer, you should press the TIMER ON/OFF key, the LCD will display the time and after 5 seconds it will display current time.

Attention

- 1. If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set can not be used togener) After the batteries are replaced every time, it is not necessary to set model code again. 2. As usual the LCD only display the time when pressing model codes "Enter" button, you can find
- the code and it is showed on LCD. After 5 seconds it returns time.
- a. Book carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the time on/off signal from remote controller.
- 4. The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance: Large than 8 meters Battery model: Battery AAA(UM-4、R03) *2 Weight: Approx.45g(excl. the batteries)

Power supply voltage: DC3V Dimension: L123mm * W44mm * D22mm

★ The company reserves the right to make final explanations. Any changes to the design or model may be made without further notice.

omegáý ENVIRONMENTAL

TECHNOLOGIES LLC 17702 Mitchell North, #101 Irvine, CA. 92614, USA Tel: 714 795 2830 Fax: 714 966 1646 info@otecomega.com

eto® 11380 Inte Miramar, Florida, 33025 USA Tel: 888 840 7550, 954 715 5006 Fax: 954 212 8280 com

